


JIVE

USER MANUAL

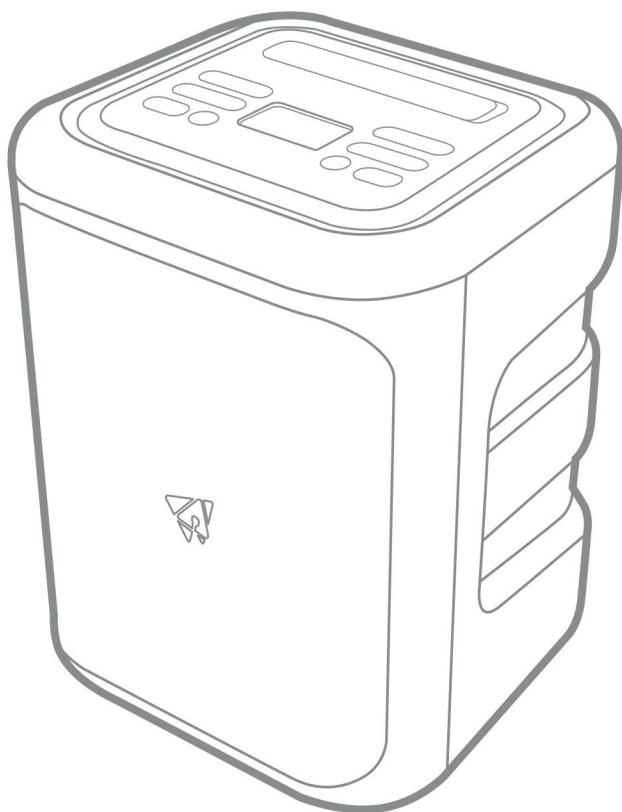


PORTABLE PARTY SPEAKER

BLUETOOTH 5.0



JIVE

User Manual

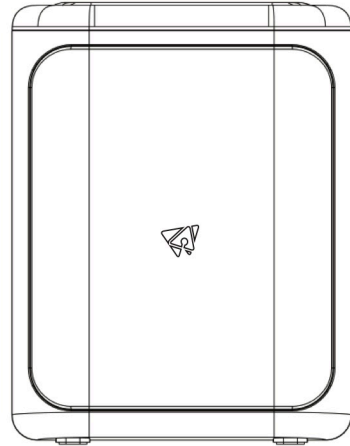

📣 Introduction

Immerse yourself in the ultimate audio experience with the WOW! Audio Jive – the epitome of portable party speakers crafted for true music aficionados. Boasting a sleek and intuitively designed exterior, this speaker redefines sophistication. Its distinctive inverted tube box elevates the stereo experience, while the state-of-the-art DSP sound processing chip ensures an unparalleled, well-balanced and crystal-clear audio output.

📣 Specification

Basic Functions:	AUX IN / Mic / BT / USB / SD CARD / FM / TWS / Party Lights
Music Format:	MP3
Bluetooth Version:	5.0
Frequency Response:	90Hz - 20kHz
SNR:	≥80dB
Power Input:	TYPE C 5V
Lithium Battery:	7.4V 5400mAh
Screen:	LED screen
Speaker Power:	55W
Speaker Impedance:	4Ω
Operating Temperature:	-45 to 55°C
Speaker Size:	1 x 8" Woofer, 2 x 1.5" Tweeters
Unit Size:	W- 240mm, H- 315mm, D- 220mm
Weight:	4 kg.
Battery Runtime:	10 hours (LED Off, mid volume); 6 1/2 hrs (LED on, mid volume)

Package Inclusions

- Speaker Unit
- USB-C Charging Cable
- Manual

Booth Operation

Power On: Press and hold the “POWER” button for about 3 seconds. The LED screen lights up indicating that the unit has been turned on.

Power Off: Press and hold the “POWER” button for about 3 seconds. When the LED screen turns off, it signifies that the unit has been powered off.

Functions

Bluetooth Mode

- Turn on the speaker, and the LED screen will display a flashing "BLUE" word.
- Enable Bluetooth on your phone. Find and choose "WOW AUDIO Jive" from the list.
- Long press the PLAY/PAUSE button to connect or disconnect the Bluetooth.

Music Playing Mode

- When SD Card (TF) or USB drive is detected, it will automatically switch to music playing mode.
- **PLAY/PAUSE Button:** Short press to play/pause the music.
- **PREV Button:** BLUE/USB/TF mode plays the last song, and LINE mode is invalid .
- **NEXT Button:** BLUE/USB/TF mode plays the next song, and LINE mode is invalid.
- **LIGHT Button:** Long press to turn on/off the light. Short press to switch the light mode.
- **POWER Button:** Long press for on-off function. Short press to switch BT/FM/AUX modes.

FM Radio Mode

- Press the “Power” button to switch to the FM mode, the LED shows XX.XXMHZ, and the speaker prompts "FM Mode"
- Long press the “PREV” and “NEXT” buttons to switch radio stations.
- Press the “Mode” button to switch to other functions

Input/Output Interface

- **USB:** Directly insert USB to play music.
- **TF Card:** Directly insert SD Card (TF card) to play music.

- **Audio Input (AUX-in):** Connect an external device such as mobile phones and tablets with 3.5mm headphone/line out jack.
- **MIC Input:** Connect an external microphone to the speaker using PL jack or 6.3mm Mic Jack
- **Charging Interface:** For USB Type-C charging. AC charging adapter is not included with the product.

AUX-in

- Press the power button to switch to the AUX-in mode.
- Insert the audio cable (not included) into the external AUX input port on the speaker. Then, connect the other end to the headphone output jack of your mobile phone, tablet, or other devices.
- Press the "Play" button to mute.
- Press the "Power" to switch other functions.

Light Patterns

Activate color-changing LED lights. Press the "LIGHT" button to switch from four (4) different light modes. The lights will move along with the music, adding a dynamic feel.

Echo

Press the "Echo" Button and it shows "E" on the LED screen. Adjust the volume by pressing "ECHO+" or "ECHO-".

Microphone

Press the "Mic" Button and it shows "H" on the LED screen, Adjust the volume by pressing "VOL+" or "VOL-".

TWS

- Turn on two JIVE speaker units at the same time, press "TWS" button, and select the speaker you want to be the "HOST"
- Once TWS pairing is successful, the "HOST" speaker will give a prompt tone, display a blinking "BLUE" word and steady BT icon on the LED screen.
- Turn on the Bluetooth on your mobile phone and pair it to the "HOST".
- To disconnect, short press the "TWS" button.

Charging

- When charging, the red light is on. The light turns off when fully charged.
- Charging Time: 5-6 hours

NOTE: Charging time may differ due to variations in USB-C equipment.

Caution: Due to product updates and enhancements, certain products may deviate from the provided instructions. Please consult the specific product type for accurate guidance.

Troubleshooting

If the Bluetooth audio system experiences unexpected disconnection, battery protection, or other issues resulting in a failure to connect or functional disruptions, it is recommended to power off the device and then restart it to resolve these conditions.

Important Cautions

- Please do not touch the connector with your fingers or metal.
- Avoid strong vibrations.
- Do not personally disassemble, modify or repair the unit.
- Keep it away from damp environment, high temperatures and oil fumes.
- When connecting or detaching accessories on this product, please do not apply excessive force.



This product is equipped with a rechargeable lithium ion battery inside. Do not disassemble or tamper battery. Risk of fire or injury.



JIVE