

MyMove

USER MANUAL



PORTABLE BOUTIQUE SPEAKER

BLUETOOTH 5.3


Specification

Bluetooth Version	5.3
Output Power	28W (18W + 2 x 5W)
Distortion	≤ 1%
Frequency Response	50Hz-18KHZ
Driver Size	1 x 3" woofer, 2 x 2" full-range
Signal-to-Noise Ratio	>75dB
Impedance	4 ohm
Effective Distance	10 meters
Battery Runtime	8 Hours
Charging Time	4 Hours
Battery Type	Polymer Lithium Ion (11.1V/2200mAh)
Input Sensitivity	BT -10±1dB
AUX	0.3±0.1V
Weight	1.2 kg
Charging Voltage	5V DC 3.0A USB-C

Features

- Bluetooth 5.3, TWS Function, 3.5mm AUX Input
- Rechargeable Lithium Battery for up to 8 hours use
- Key Controls: Power, Volume, Treble, Bass, Pair
- Portable Speaker with Color Case

Function Keys

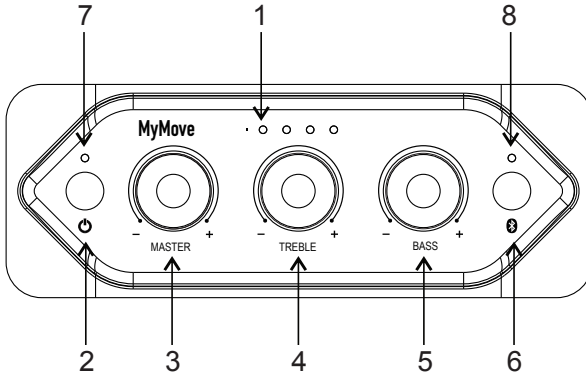

1. Battery Light Indicator
2. Power Button
3. Master Volume Dial
4. Treble Dial
5. Bass Dial
6. Bluetooth Button
7. Power Light Indicator
8. Bluetooth Light Indicator

Function

Charging

- The charging voltage is 5V/3A
- The red Battery Light Indicator will flash sequentially when charging. The Battery Light Indicators are steadily on when fully charged.

Bluetooth

- Press and hold the POWER button for 2 seconds, and the Bluetooth Light Indicator flashes when it enters the pairing state.
- Enable Bluetooth on your phone. Find and choose "WOW AUDIO MyMove" from the Bluetooth device list on your phone.
- The Bluetooth Light Indicator will stay on when connected to your phone.
- To disconnect, press and hold the "Bluetooth" button for 1 second.
- To reconnect the last paired phone, press and hold the "Bluetooth" button for 1 second.

Mode

- If you are connected to Bluetooth and a 3.5mm audio cable has been plugged into the Line In (AUX) jack, the speaker automatically disconnects the Bluetooth connection and switches to Line In (AUX) mode.

Volume Control

- The MASTER Volume Dial adjusts the main volume

Treble

- The TREBLE Dial adjusts the mid and high-frequency tones.

Bass

- The BASS Dial adjusts the low-frequency tone

TWS Function

- To activate TWS mode, start by turning on both MyMove speaker systems.
- To assign the Master Speaker, press the Power button 2x on one of the MyMoves that you would like to use as a Master Speaker. This will activate the TWS pairing mode on the Master Speaker. The Bluetooth light indicator will be flashing on this stage.
- The Slave Speaker will automatically connect to the Master Speaker. Once this happens, the Master Speaker will have a voice prompt announcing "Left Channel", while the Slave Speaker will have a voice prompt announcing "Right Channel". The Bluetooth light indicator will stay on.
- The MyMove supports 3.5mm Line In (AUX) mode with TWS Function. To switch your source from Bluetooth to Line In (AUX) mode, just plug in a 3.5mm Line In (AUX) cable into the Line In (AUX) jack of the MyMove. To go back to Bluetooth mode, just disconnect the Line In (AUX) cable from the Line In (AUX) jack of the MyMove.
- To deactivate TWS mode, press the Power button 2x on either Master Speaker or Slave Speaker.

Auto Shut Off

- When there is no audio signal or active Bluetooth connection for 15 minutes, the speaker will automatically shut off.

How to Remove and Install the Color Case

1. Gently peel back the Color Case starting from one corner. Use your fingers to carefully loosen it from each side.
2. Continue peeling and lifting until the Color Case is completely removed from the speaker.
3. Wipe the speaker surface with a clean, dry cloth to remove any dust or debris.
4. Align the Color Case with the speaker, making sure any openings or buttons match up.
5. Begin attaching the Color Case from one edge. Press it gently onto the speaker, securing it in place. Work your way around the speaker, ensuring an even and snug fit.
6. Once Color Case cover is reinstalled, test the speaker's functionality to ensure everything is working correctly. Check buttons, ports, and any other feature to guarantee proper operation.



This product is equipped with a rechargeable lithium ion battery inside. Do not disassemble or tamper battery. Risk of fire or injury.



MyMove