

MyTrack

USER MANUAL



MOBILE BOUTIQUE SPEAKER

BLUETOOTH 5.3


Specification

Bluetooth Version	5.3
Output Power	40W
Distortion	≤ 1%
Frequency Response	50Hz-20KHZ
Sensitivity	Bluetooth: 500±50mV
Driver Size	1 x 1" tweeter, 1 x 8" woofer
Signal-to-Noise Ratio	>70dB
Impedance	4 ohm
Effective Distance	10 meters
Battery Runtime	8 Hours
Charging Time	4 Hours
Battery Type	18650 Lithium Ion Battery (18.5V/4000mAh)
Weight	7.5 kg
External Power Supply	Input: 100-240V AC 50-60Hz Output: 22.5V DC 2.5A


Features

- Bass Boost and Music Effects
- Bluetooth 5.3, TWS Function, RCA 3.5mm AUX Input
- Rechargeable Lithium Battery for up to 8 hours use
- Wood Cabinet
- Telescopic Handle and Wheels

Function Keys

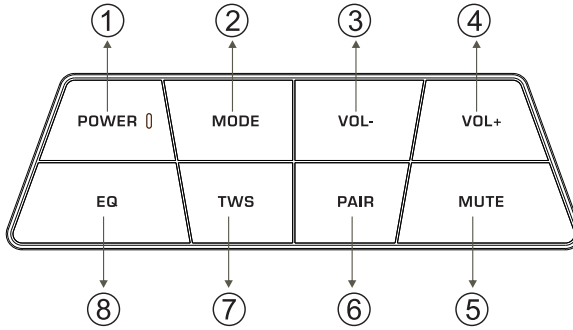

1. Power Button: Long press to turn on/off the speaker system
2. Mode Selection: Bluetooth and Line In (AUX) mode switching
3. VOL- : Short press to reduce the volume
4. VOL+ : Short press to increase the volume
5. Mute Button: Short press to mute or unmute the audio
6. Pair Button: Bluetooth pairing button
7. TWS Button: Connect two identical speakers wirelessly
8. EQ Button: Short press to switch between five music effect modes

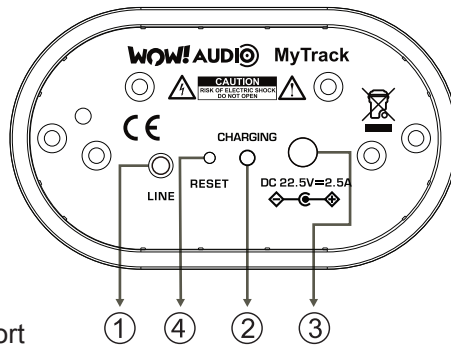

1. LINE IN (AUX) Port
2. Charging Light Indicator
3. Adapter Power Input
4. Reset Button - Use to shut down device when there's an error

Functions

Charging

When charging, the Charging Light Indicator is on and goes out when fully charged.

Bluetooth

- Light Indicator: Blue
- Enable Bluetooth on your phone. Find and choose “WOW AUDIO MyTrack” from your phone’s Bluetooth device list.
- When a phone is connected, short press to disconnect.
- Once disconnected, the speaker can be connected to another phone.

LINE IN (AUX) Mode

Light Indicator: Green

Volume Control

- Short press VOL+ to increase the volume
- Short press VOL- to decrease the volume

TWS Function

- Turn on both MyTrack speaker systems at the same time. Make sure that both of them are on Bluetooth mode. Press the MODE button to change modes between LINE IN and Bluetooth.
- Short press the TWS button on any one of the 2 MyTrack speaker systems to connect the 2 MyTrack speakers together wirelessly. The MyTrack speaker system where you have pressed the TWS button will be assigned as the "Master Speaker", which is also the left channel.
- The "Master Speaker" will be connected automatically to the other MyTrack speaker system, which will be assigned as the "Slave Speaker" or the right channel.
- When the TWS connection is successful, the Master Speaker will display a blinking blue light on the POWER button, while the Slave Speaker will display a blinking green light on the POWER button.
- Connect your phone or device to the Master Speaker:
 - a. **Via Bluetooth Wireless Connection:** Connect your phone or device to the Master Speaker via Bluetooth. When the connection is successful, the POWER button on the Master Speaker will show a steady blue light, while the POWER button on the Slave speaker will have a blinking green light. Your Bluetooth audio will be played back on both the Master (left channel) and Slave (right channel) speakers.
 - b. **Via 3.5mm Line In (AUX) Wired Connection:** Press the MODE button on the Master Speaker to activate Line In (AUX) mode. Then connect your phone or device via 3.5mm Line In (AUX) cable. The POWER button on the Master Speaker will show a steady green light, while the POWER button on the Slave speaker will have a blinking green light. Your 3.5mm Line In (AUX) audio will be played back on both the Master (left channel) and Slave (right channel) speakers.

- To deactivate TWS, press the TWS button on the Master Speaker. By default, the TWS function will be activated when you have previously made the connection with the same 2 MyTrack speaker systems.

Auto Shut Off





- When there is no audio signal via 3.5mm Line In (AUX) or active Bluetooth connection, or when the TWS function has been disconnected for 20 minutes, the speaker system will automatically shut off.

TROUBLESHOOTING

If you encounter a problem while using this speaker System, please follow these troubleshooting tips to solve the problem.


Issue	Possible Cause	Solution
No Sound	The power cord is not connected properly	Re-plug the power cord
	No input from audio source	Check source audio or change signal source
	The volume adjustment is at the minimum position	Turn up the master volume
Distorted Sound	Signal source	Change signal source

⚠ Important Cautions

 <p>The lightning bolt symbol with a rocket head inside a triangle is a warning that there is dangerous voltage without insulation inside the enclosure - this voltage is enough to cause an electric shock.</p>	 <div style="border: 1px solid black; padding: 2px; display: inline-block; text-align: center;"> Attention <small>To avoid electric shock, please do not open the unit.</small> </div> 
 <p>The exclamation point inside the triangle is a warning that there are important operating and maintenance instructions on the attached page. Please refer to the operating manual.</p>	<p>CAUTION: To avoid electric shock, do not open the case, and do not attempt to repair it yourself. Please contact our Customer Care.</p>

To ensure your safety, please read the safety instructions and relevant precautions before using the product.

1. For adequate ventilation and heat dissipation, please ensure that the distance between the product and surrounding objects is at least 100mm.
2. Do not cover the ventilation holes with items such as newspapers, tablecloths and curtains to avoid obstructing ventilation.
3. Do not place exposed flame sources, such as lit candles on the product.
4. The product must not be exposed to water drops or splashes.



UN 3481

This product is equipped with a rechargeable lithium ion battery inside. Do not disassemble or tamper battery. Risk of fire or injury.



MyTrack